

# BRAKE MAINTENANCE WORKING AIR GAP ADJUSTMENT


## Required tools:

- Metric hex head keys (4mm)
- Metric keys (7, 8, 10mm)
- Metric feeler gauge set
- Cross tip screwdriver

1. **Completely unscrew hand release (using hex head key if necessary) until it comes off from brake lever. This will activate brake.**




# BRAKE MAINTENANCE WORKING AIR GAP ADJUSTMENT

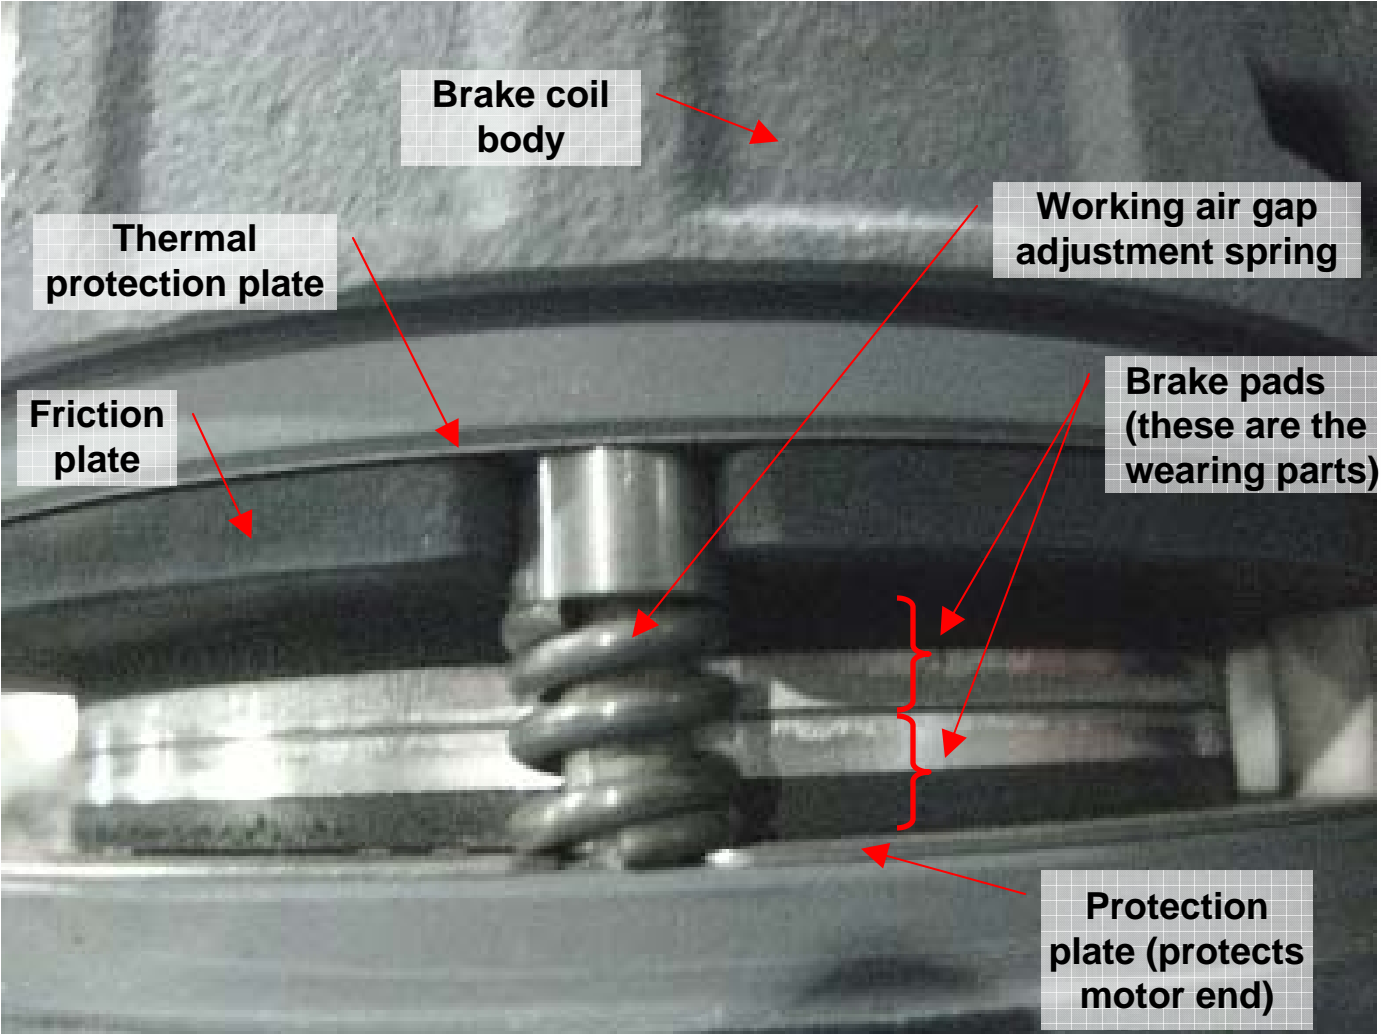

## BRAKE MAINTENANCE WORKING AIR GAP ADJUSTMENT


4. Adjust working air gap by tightening or loosening the retaining bolts of the 3 springs.

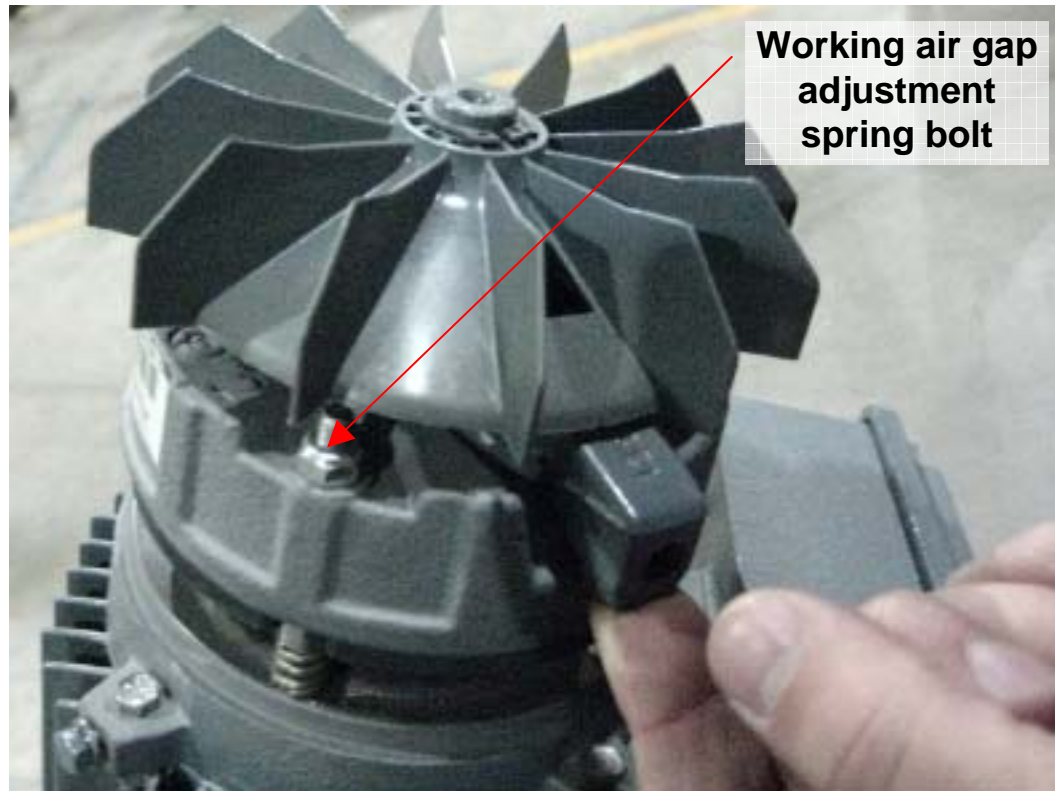


## BRAKE MAINTENANCE ELECTRICAL MAINTENANCE



**Tie a pulling cord to the coil cable if you need to remove it, to facilitate pulling it back in place.**

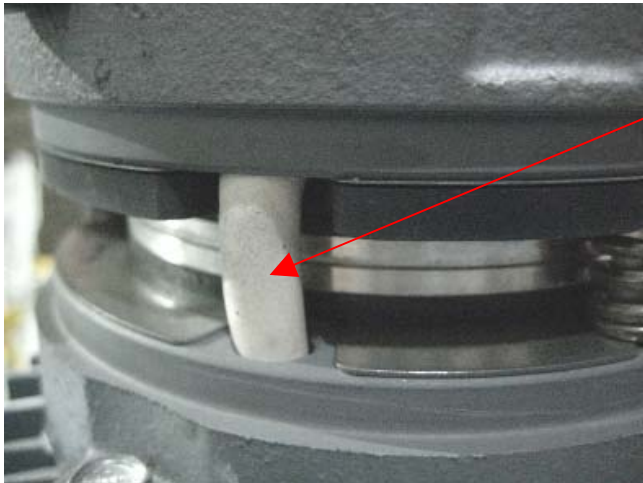

**Coil cable**

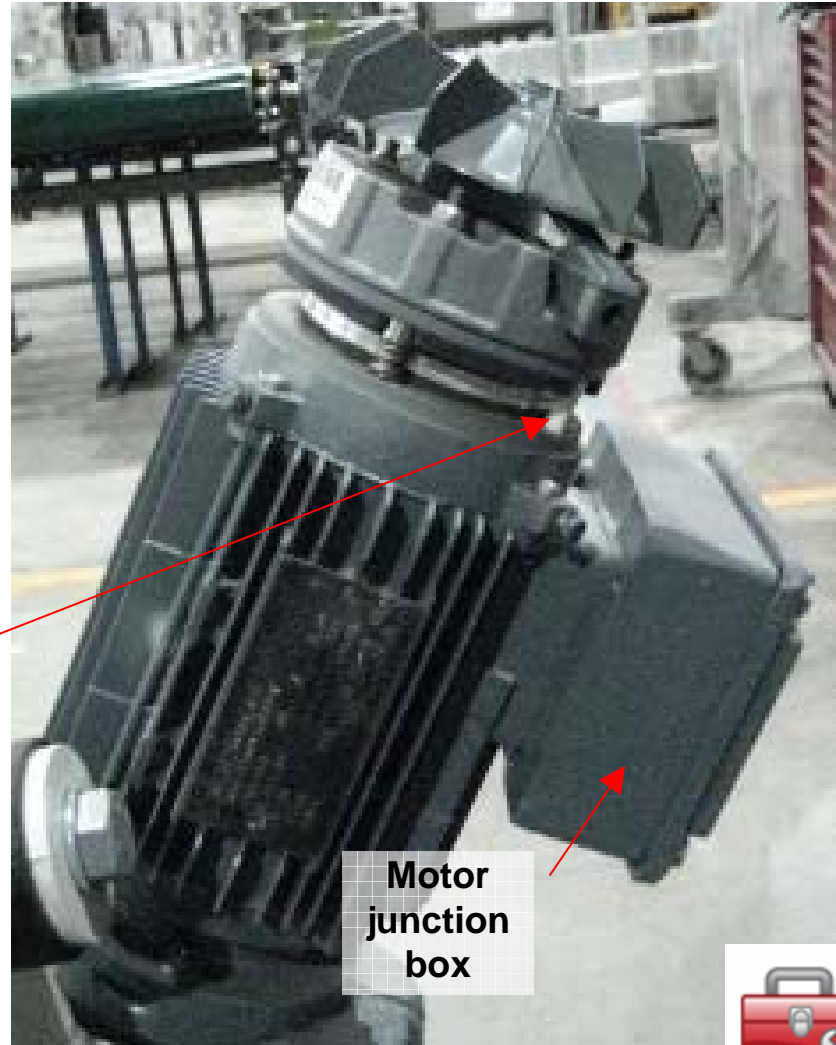

**Motor junction box**

